

omnivan® TOP-HINGED DOOR MAINTENANCE PROCEDURES

STRIKER PLATES: (should be checked MONTHLY):

Check the post portion of the striker plate that the latch locks around. Check for any wear or grooves caused by the latch itself. To test, close the door slowly until you hear the latch click only one time. Now try to pull the door open by the grab handle (not the paddle latch). If the paddle latch is in the first click position and you can pull the door open, the striker post is worn too much and should be replaced. While you are checking, go ahead and push the door closed until you hear the second click from the paddle latch. This is the primary locking point and you should have a good tight seal. If needed the striker plate can be adjusted in or out to give a good seal when the door is closed.